 
 



Various Lock Accessories

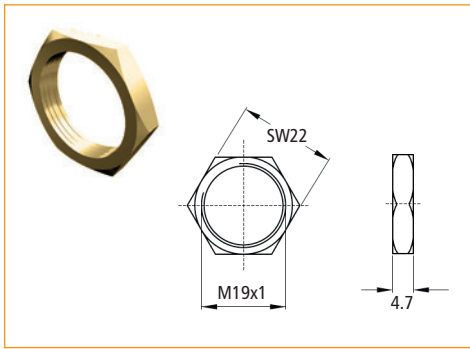


| Item Number | Description |
|--------------|-------------|
| 33111 04 040 | Cam Nut |

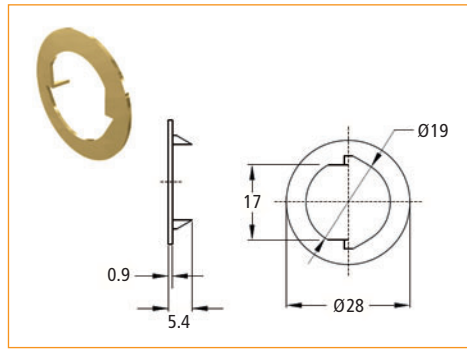


| Item Number | Description |
|--------------|-------------|
| 74139 03 095 | Cam Washer |

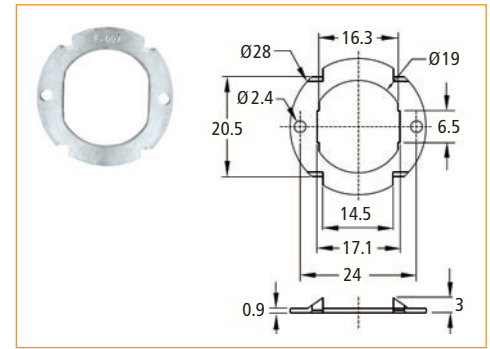 


| Item Number | Description |
|--------------|-------------|
| 74139 03 094 | Cam Washer |

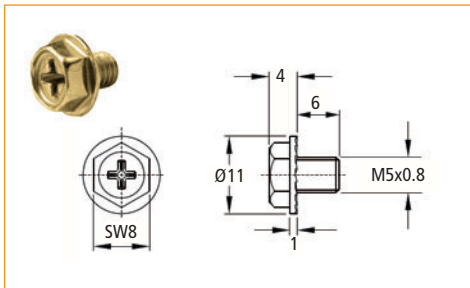

| Item Number | Description |
|--------------|--------------------|
| 74111 03 096 | Cam Mounting Screw |

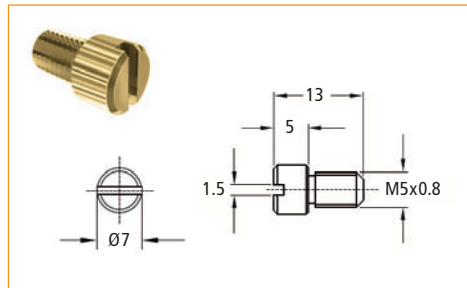

| Item Number | Description |
|--------------|-----------------------------|
| 33221 00 007 | Extension Pin for Push Lock |

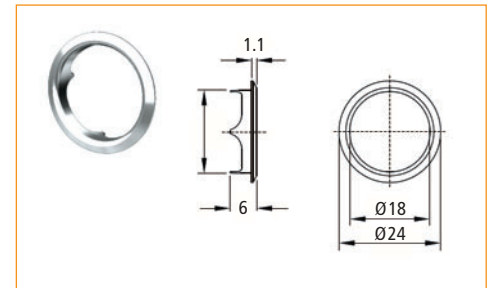

| Item Number | Description |
|--------------|--------------|
| 33591 52 018 | Bezel Nickel |
| 33591 58 020 | Bezel Black |
| 33591 57 019 | Bezel Brass |

Combination Lock Accessories

Finds user code when user forgets code or is unavailable.



| Item Number | Description |
|--------------|-----------------|
| 32911 58 113 | Black Smart Key |

Resets personal mode to factory code.



| Item Number | Description |
|--------------|---------------------|
| 32911 00 112 | Code Resetting Tool |