



















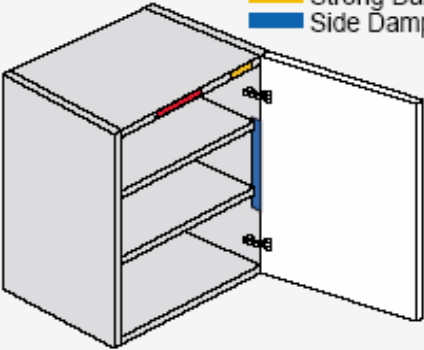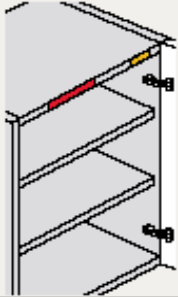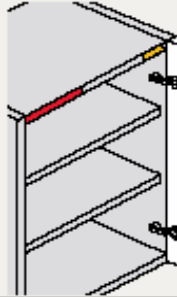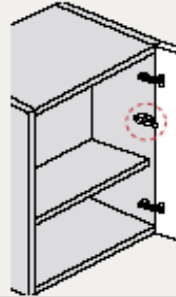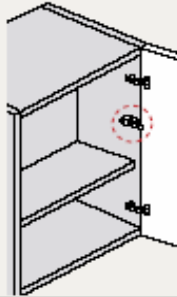

# U.S. Futaba, Inc.

## Soft Close Damper Placement / Installation Guide\*

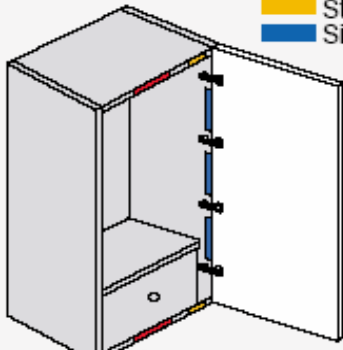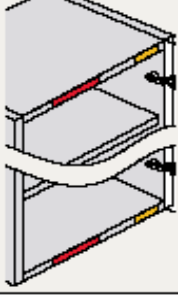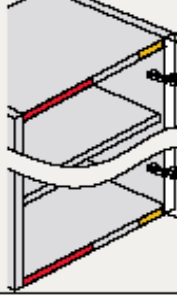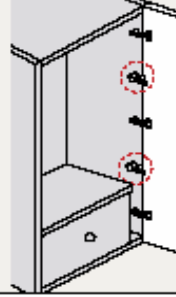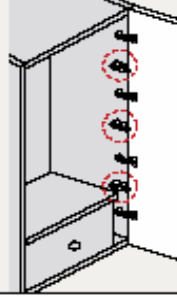

### GUIDE FOR INSTALLATION

Optimal Position	Door Width (mm)	Door Damper		Side Damper	
		450	Over 600	450	Over 600
 <p> <span style="color: red;">■</span> Door Damper  <span style="color: yellow;">■</span> Strong Damper  <span style="color: blue;">■</span> Side Damper         </p> <p>〈For kitchen doors〉</p>					
		 ×1	 ×1	 ×1	 ×1
 <p> <span style="color: red;">■</span> Door Damper  <span style="color: yellow;">■</span> Strong Damper  <span style="color: blue;">■</span> Side Damper         </p> <p>〈For wardrobe doors〉</p>					
		 ×2	 ×2	 ×2	 ×3

\* The number of damper and the best fixing position will be changed according to the door size and weight.

450mm = 17-3/4"

600mm = 23-1/2"